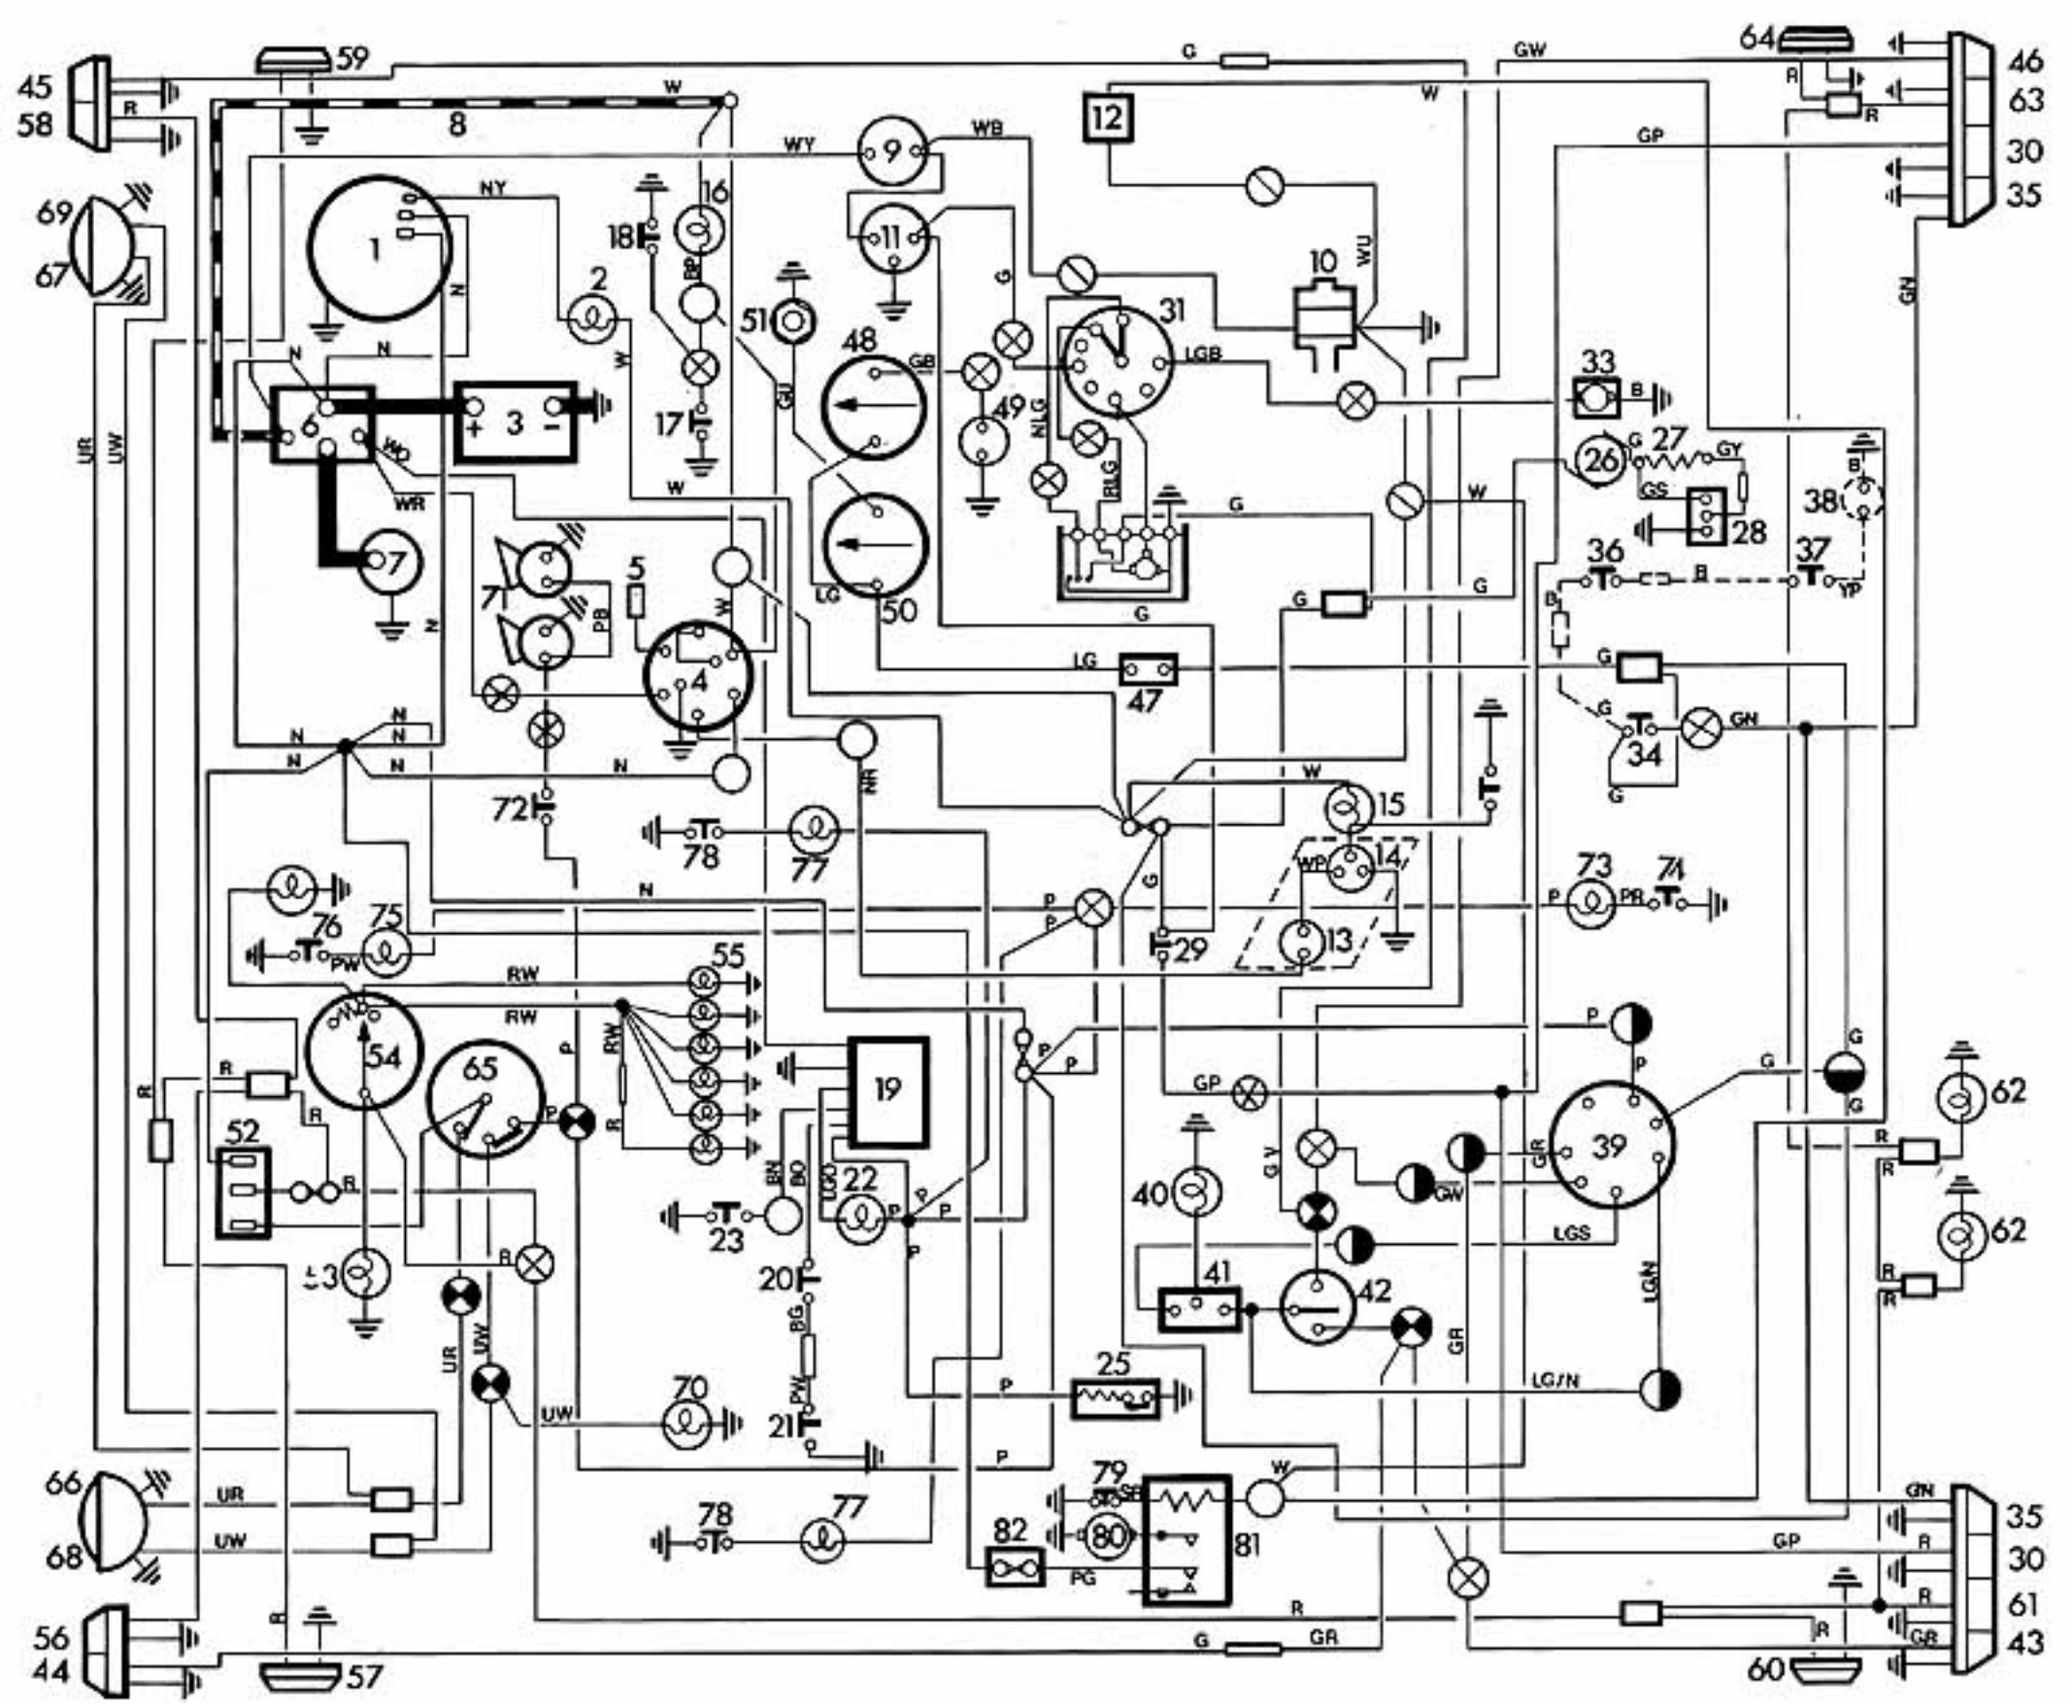

Fig. 10.66 Wiring diagram for N. American LHD Spitfire 1500 from commission number FM95001